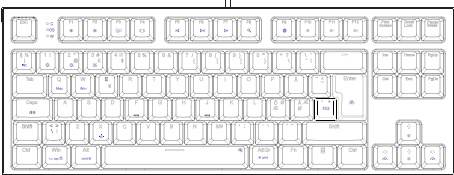
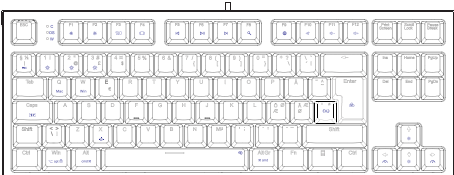


CEPTER ZETA TKL GAMING KEYBOARD — USER MANUAL  EN CZETATKL www.czper.tech	Introduction Welcome to the world of high-performance gaming with the CEPTER Gaming Keyboard. Featuring a unique gasket structure for enhanced key stability and a unique typing experience, our keyboard is designed to elevate your gaming sessions. Unleash your gaming potential with the CEPTER Gaming Keyboard. Let the adventure begin! Package Content 1 x Gaming Keyboard; 1 x USB A-C Cable; 1 x User Manual Technical Specifications Model Name: CZETATKL Key Switch Type: Mechanical Red Switch Backlighting: Customizable RGB backlighting Macro Keys: Fully programmable keys Anti-Ghosting: Full keys Interface: USB Cable Type: Braided Fiber Cable with magnetic ring Cable Length: 1.8m Input: 5V~200mA Dimensions: 363 x 139 x 40mm Compatibility: Windows XP/Windows 7/Windows 8/Windows 10/Windows 11/macOS 2	Getting Started Connect the keyboard to your computer using the detachable Type C to Type A cable. Multimedia Function Keys <table> <tr> <th>Function Keys</th><th>Features Description</th></tr> <tr> <td>FN+F1</td><td>Screen Brightness-</td></tr> <tr> <td>FN+F2</td><td>Screen Brightness+</td></tr> <tr> <td>FN+F3</td><td>Task Center</td></tr> <tr> <td>FN+F4</td><td>Application Switch</td></tr> <tr> <td>FN+F5</td><td>Previous Screen</td></tr> <tr> <td>FN+F6</td><td>Play/Pause</td></tr> <tr> <td>FN+F7</td><td>Next Song</td></tr> <tr> <td>FN+F8</td><td>Search</td></tr> <tr> <td>FN+F9</td><td>Language Switch</td></tr> <tr> <td>FN+F10</td><td>Mute</td></tr> <tr> <td>FN+F11</td><td>Volume-</td></tr> <tr> <td>FN+F12</td><td>Volume+</td></tr> <tr> <td>FN+Q</td><td>Switching Mac System</td></tr> <tr> <td>FN+W</td><td>Switching Win System</td></tr> <tr> <td>FN+*</td><td>Switching Light Mode</td></tr> <tr> <td>FN+↑</td><td>Backlight Brightness+</td></tr> <tr> <td>FN+↓</td><td>Backlight Brightness-</td></tr> </table> 3	Function Keys	Features Description	FN+F1	Screen Brightness-	FN+F2	Screen Brightness+	FN+F3	Task Center	FN+F4	Application Switch	FN+F5	Previous Screen	FN+F6	Play/Pause	FN+F7	Next Song	FN+F8	Search	FN+F9	Language Switch	FN+F10	Mute	FN+F11	Volume-	FN+F12	Volume+	FN+Q	Switching Mac System	FN+W	Switching Win System	FN+*	Switching Light Mode	FN+↑	Backlight Brightness+	FN+↓	Backlight Brightness-	FN+← Backlight Speed- FN+→ Backlight Speed+ FN+Enter Switching Light Effect Color FN+X Off/On Backlight FN+Space Key Press and hold the FN key and Space key for 5 seconds, the keyboard backlight will flash, and the keyboard will be restored to its factory default settings. FN+Caps Switching side light mode/Turn off side light FN+11 FPS mode:W/A/S/D/↑/↓/←/→keys light up FN+2@ LOL mode:Q/W/E/R/D/F/G/H/J/K/L/Tab/ESC/1-6 keys light up FN+3# 37 keys office mode:A-Z/J/A/-/↑/↓/←/→keys light up FN+Y\$ Backlight recording Backlight Recording - To begin recording in backlight mode, press "FN+Y\$". The indicator will start flashing. - Press any key based on your preferences. Each press will change the color. Select colors according to your liking (e.g., press the A key for red, then green). Press "FN+Y\$" to save the recording. 4	Driver Download for Macro Settings To customize macro settings for your gaming keyboard, please go to power.nj Maintenance And Care Instructions 1.Regularly clean your keyboard using a soft, dry cloth to remove dust and debris. Avoid using corrosive cleaning agents to clean this product. 2.Keep this product away from heat sources or open flames, such as stoves. 3.Prevent prolonged exposure to direct sunlight. 4.Do not expose this product to fire to prevent explosion hazards. 5.Treat your keyboard with care to maintain its performance. Avoid excessive force when typing or gaming to prevent key wear or switch damage.  This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, Please contact the local authority or your retailer where you purchased the product. Power International AS, PO Box 523, 1471 Lørenskog, Norway Power Norge: https://www.power.no/tundeservice/ T: 21 00 40 00 Power Danmark: https://www.power.dk/tundeservice/ T: 70 17 10 17 Power Finland: https://www.power.fi/tuuli/sisakokouspalvelu/ T: 0305 0305 Power Sverige: https://www.power.se/tundeservice/ T: 08 517 66 00 CE  5
Function Keys	Features Description																																							
FN+F1	Screen Brightness-																																							
FN+F2	Screen Brightness+																																							
FN+F3	Task Center																																							
FN+F4	Application Switch																																							
FN+F5	Previous Screen																																							
FN+F6	Play/Pause																																							
FN+F7	Next Song																																							
FN+F8	Search																																							
FN+F9	Language Switch																																							
FN+F10	Mute																																							
FN+F11	Volume-																																							
FN+F12	Volume+																																							
FN+Q	Switching Mac System																																							
FN+W	Switching Win System																																							
FN+*	Switching Light Mode																																							
FN+↑	Backlight Brightness+																																							
FN+↓	Backlight Brightness-																																							
CEPTER ZETA TKL SPILLTASTATUR — BRUKERHÅNDBOK  NO CZETATKL www.czper.tech	Introduksjon Velkommen til en verden av høyteknologispill med CEPTER spilltastatur. Med en unik pakningsstruktur for forbedret tastestabilitet og en unik skriveopplevelse, er tastaturet vårt designet for å heve spilltastene dine. Slipp løs spillpotensialet ditt med CEPTER spilltastatur. La eventyret begynne! Pakkeinnhold 1 x spilltastatur; 1 x USB A-C-kabel; 1 x brukerhåndbok Tekniske spesifikasjoner Modelnavn: CZETATKL Type nøkkelbryter: mekanisk rød bryter Bakgrunnsbelysning: Tilpassbar RGB-bakgrunnsbelysning Makro-taster: Fullt programmerbare taster Anti-ghosting: Fullt nøkler Grenssnitt: USB Kabeltype: Flettet fiberkabel med magnetring Kabel lengde: 1,8m Inndata: 5V~200mA Dimensjoner: 363 x 139 x 40mm Kompatibilitet: Windows XP/Windows 7/Windows 8/Windows 10/Windows 11/macOS 7	Komme i gang Koble tastaturet til datamaskinen med den avtakbare Type C til Type A-kabelen. Multimedia funksjonstaster <table> <tr> <th>Funksjonstaster</th><th>Funksjoner Beskrivelse</th></tr> <tr> <td>FN+F1</td><td>Skjermens lysstyrke-</td></tr> <tr> <td>FN+F2</td><td>Skjermens lysstyrke+</td></tr> <tr> <td>FN+F3</td><td>Oppgavecenter</td></tr> <tr> <td>FN+F4</td><td>Applikasjonsbryter</td></tr> <tr> <td>FN+F5</td><td>Forrige sang</td></tr> <tr> <td>FN+F6</td><td>Spill av/pause</td></tr> <tr> <td>FN+F7</td><td>Neste sang</td></tr> <tr> <td>FN+F8</td><td>Søk</td></tr> <tr> <td>FN+F9</td><td>Språkbytte</td></tr> <tr> <td>FN+F10</td><td>Stum</td></tr> <tr> <td>FN+F11</td><td>Volum-</td></tr> <tr> <td>FN+F12</td><td>Volum+</td></tr> <tr> <td>FN+Q</td><td>Bytter Mac-system</td></tr> <tr> <td>FN+W</td><td>Bytte Win System</td></tr> <tr> <td>FN+*</td><td>Bytte lysmodus</td></tr> <tr> <td>FN+↑</td><td>Bakgrunnslys lysstyrke+</td></tr> <tr> <td>FN+↓</td><td>Bakgrunnslys lysstyrke-</td></tr> </table> 8	Funksjonstaster	Funksjoner Beskrivelse	FN+F1	Skjermens lysstyrke-	FN+F2	Skjermens lysstyrke+	FN+F3	Oppgavecenter	FN+F4	Applikasjonsbryter	FN+F5	Forrige sang	FN+F6	Spill av/pause	FN+F7	Neste sang	FN+F8	Søk	FN+F9	Språkbytte	FN+F10	Stum	FN+F11	Volum-	FN+F12	Volum+	FN+Q	Bytter Mac-system	FN+W	Bytte Win System	FN+*	Bytte lysmodus	FN+↑	Bakgrunnslys lysstyrke+	FN+↓	Bakgrunnslys lysstyrke-	FN+← Bakgrunnslyshastighet- FN+→ Bakgrunnslyshastighet+ FN+Enter Bytte lysseffektfarge FN+X Av/PÅ Bakgrunnsbelysning FN+ Trykk og hold inne FN-tasten og mellomromstast 15 sekunder, tastaturets bakgrunnsbelysning vil bli, og tastaturet vil bli gjenopprettet til fabrikkinnstillingene. FN+Caps Bytte sideslysmodus/Skriv av sideslys FN+11 FPS-modus: W/A/S/D/↑/↓/←/→-tastene lyser FN+2@ LOL-modus: Q/W/E/R/D/F/G/H/J/K/L/Tab/ESC/1-6-tastene lyser FN+3# 37 nøkler kontormodus: A-Z/J/A/-/↑/↓/←/→-tastene lyser FN+Y\$ Motlyspottak Motlyspottak - For å starte oppsettet i bakgrunnsbelysningsmodus, trykk "FN+Y\$". Indikatoren vil begynne å blinke. - Trykk på hvilken som helst tast basert på dine preferanser. Hvert trykk vil endre fargen. Velg farger i henhold til den ønsket farge (for eksempel A-tasten for rød, deretter grønn). Trykk "FN+Y\$" for å lagre oppsettet. 9	Driver Nedlastning for Makroinnstillinger For å tilpasse makroinnstillinger for ditt spilltastatur, vennligst gå til power.nj Velldikeholds- og pleieinstruksjoner 1. Rengjør tastaturet regelmessig med en myk, f
Funksjonstaster	Funksjoner Beskrivelse																																							
FN+F1	Skjermens lysstyrke-																																							
FN+F2	Skjermens lysstyrke+																																							
FN+F3	Oppgavecenter																																							
FN+F4	Applikasjonsbryter																																							
FN+F5	Forrige sang																																							
FN+F6	Spill av/pause																																							
FN+F7	Neste sang																																							
FN+F8	Søk																																							
FN+F9	Språkbytte																																							
FN+F10	Stum																																							
FN+F11	Volum-																																							
FN+F12	Volum+																																							
FN+Q	Bytter Mac-system																																							
FN+W	Bytte Win System																																							
FN+*	Bytte lysmodus																																							
FN+↑	Bakgrunnslys lysstyrke+																																							
FN+↓	Bakgrunnslys lysstyrke-																																							

[illegible]