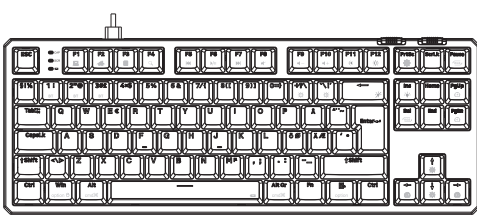
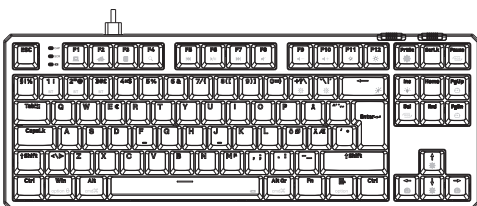


CEPTER WIRELESS MECHANICAL GAMING KEYBOARD USER MANUAL  EN CYCLOPSRO www.cepterch.com EN-1	Introduction Welcome to the world of high-performance gaming with the CEPTER Gaming Keyboard. Designed with red mechanical switches for a responsive and tactile typing experience, our keyboard is crafted to elevate your gaming sessions. Unleash your gaming potential with the CEPTER Gaming Keyboard. Let the adventure begin! Package Content 1 x Mechanical gaming keyboard; 1 x USB-C cable; 1 x USB receiver; 1 x User manual Technical Specifications Key Switch: Tacti-Red mechanical switches Backlighting: Customizable RGB backlighting Macro Keys: Fully programmable keys Anti-Ghosting: Wired key anti-ghosting Interface: Full 2.4GHz / Bluetooth Cable Type: Braided fiber cable with magnetic ring Cable Length: 1.8m Input: 5V = 1A Dimensions: 362 x 136 x 41 mm Compatibility: Windows XP, 7, 8, 10, 11 / macOS EN-2	Getting Started Wired Connection Connect the keyboard using the USB-C cable. Bluetooth Connection Switch: Set to Bluetooth mode. Enter Pairing: Press FN + 1/2/3 for 3 seconds. The corresponding blue indicator will flash quickly. Bluetooth Name: CYCLOPSRO. Connect: Once paired, the indicator stays on for 2 seconds; if not, it turns off. 2.4GHz Connection Switch to 2.4GHz mode and plug in the USB receiver. Multimedia Function Keys <table border="1"> <thead> <tr> <th>Function Key</th> <th>Windows Key Combination</th> <th>Mac Key Combination</th> </tr> </thead> <tbody> <tr> <td>Fwscw</td> <td>Hold 3 Sec. to Restore Factory Settings; Hold 3 Sec. to Restore Factory Settings</td> <td></td> </tr> <tr> <td>FwF1</td> <td>My Computer</td> <td></td> </tr> <tr> <td>FwF2</td> <td>Browser</td> <td></td> </tr> <tr> <td>FwF3</td> <td>Calculator</td> <td></td> </tr> <tr> <td>FwF4</td> <td>Search</td> <td>Focused Search</td> </tr> <tr> <td>FwF5</td> <td>Previous Track</td> <td>Previous Track</td> </tr> <tr> <td>FwF6</td> <td>Pause / Play/Pause</td> <td>Pause / Play/Pause</td> </tr> <tr> <td>FwF7</td> <td>Next Track</td> <td>Next Track</td> </tr> <tr> <td>FwF8</td> <td>Mute</td> <td>Mute</td> </tr> <tr> <td>FwF9</td> <td>Volume-</td> <td>Volume-</td> </tr> <tr> <td>FwF10</td> <td>Volume+</td> <td>Volume+</td> </tr> <tr> <td>FwF11</td> <td>Turn Down Screen Brightness</td> <td>Turn Down Screen Brightness</td> </tr> <tr> <td>FwF12</td> <td>Increase Screen Brightness</td> <td>Increase Screen Brightness</td> </tr> </tbody> </table> EN-3	Function Key	Windows Key Combination	Mac Key Combination	Fwscw	Hold 3 Sec. to Restore Factory Settings; Hold 3 Sec. to Restore Factory Settings		FwF1	My Computer		FwF2	Browser		FwF3	Calculator		FwF4	Search	Focused Search	FwF5	Previous Track	Previous Track	FwF6	Pause / Play/Pause	Pause / Play/Pause	FwF7	Next Track	Next Track	FwF8	Mute	Mute	FwF9	Volume-	Volume-	FwF10	Volume+	Volume+	FwF11	Turn Down Screen Brightness	Turn Down Screen Brightness	FwF12	Increase Screen Brightness	Increase Screen Brightness	Function Keys <table border="1"> <thead> <tr> <th>Function Key</th> <th>Function Description</th> </tr> </thead> <tbody> <tr> <td>FN + INS</td> <td>Switch between 15 lighting modes</td> </tr> <tr> <td>FN + DEL</td> <td>Change mode colors</td> </tr> <tr> <td>FN + < / FN + ↓</td> <td>Adjust backlight brightness (5 levels)</td> </tr> <tr> <td>FN + < / FN + ></td> <td>Adjust backlight speed (5 levels)</td> </tr> <tr> <td>FN + WINDOWS</td> <td>Lock/Unlock Windows and app functions (keys light up white)</td> </tr> <tr> <td>FN + PRSTC</td> <td>Switch side light modes</td> </tr> <tr> <td>FN + H0ISE</td> <td>Adjust side light color</td> </tr> <tr> <td>FN + < / B</td> <td>Adjust side light brightness (5 levels)</td> </tr> <tr> <td>FN + P-UP / PGDN</td> <td>Adjust side light speed (5 levels)</td> </tr> <tr> <td>FN + BACK</td> <td>Turn off the backlight of the keyboard (the side lights remain illuminated)</td> </tr> </tbody> </table> Battery Information Battery Inquiry: Press FN + Space. The backlight turns off, and numeric keys 1-0 light up to indicate battery percentage: 1 = 10% 2 = 20% 3 = 30% (Red below 30%, yellow below 50%, green above 50%) Note: Battery inquiry is not available while charging. Low Voltage Reminder: The charging indicator flashes red, and side lights turn off. Charging Tips: Red light: Charging (always on) No light: Fully charged (always on) EN-4	Function Key	Function Description	FN + INS	Switch between 15 lighting modes	FN + DEL	Change mode colors	FN + < / FN + ↓	Adjust backlight brightness (5 levels)	FN + < / FN + >	Adjust backlight speed (5 levels)	FN + WINDOWS	Lock/Unlock Windows and app functions (keys light up white)	FN + PRSTC	Switch side light modes	FN + H0ISE	Adjust side light color	FN + < / B	Adjust side light brightness (5 levels)	FN + P-UP / PGDN	Adjust side light speed (5 levels)	FN + BACK	Turn off the backlight of the keyboard (the side lights remain illuminated)	Custom Game Lighting 1. Press FN + 0 to access default game lighting. Then, press FN + HOME, the CAP and SCOR indicators will blink, and all keys will turn off, entering recording mode. Select the desired key and color. 2. Press FN + HOME again to save the recorded lighting, and the CAP and SCOR indicators will return to normal. Use FN + 0 to access the recorded lighting. Driver Download for Macro Settings To customize macro settings for your gaming keyboard, please go to power.no  This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed of at the end of its life separately from your household waste. There are separate collection systems for recycling in EU. For more information, please contact the local authority or your retailer where you purchased the product. Power International AS, PO Box 523, 1471 Lørenskog, Norway <table border="0"> <tr> <td>Power Norge: http://www.power.no/kundservice/ T: 21 00 40 00</td> <td>Power 1 Danmark: http://www.power1.dk/kundservice/ T: 70 70 17 07</td> </tr> <tr> <td>Expert Danmark: http://www.expert.dk/kundservice/ T: 70 70 17 07</td> <td>Power Finland: http://www.power.fi/kali/osaajapalvelu/ 1.0305.0305</td> </tr> <tr> <td>Power Danmark: http://www.power.dk/kundservice/ T: 70 33 80 80</td> <td>Power Sverige: http://www.power.se/kundservice/ 1.08 517 66 000</td> </tr> </table>    EN-5	Power Norge: http://www.power.no/kundservice/ T: 21 00 40 00	Power 1 Danmark: http://www.power1.dk/kundservice/ T: 70 70 17 07	Expert Danmark: http://www.expert.dk/kundservice/ T: 70 70 17 07	Power Finland: http://www.power.fi/kali/osaajapalvelu/ 1.0305.0305	Power Danmark: http://www.power.dk/kundservice/ T: 70 33 80 80	Power Sverige: http://www.power.se/kundservice/ 1.08 517 66 000
Function Key	Windows Key Combination	Mac Key Combination																																																																								
Fwscw	Hold 3 Sec. to Restore Factory Settings; Hold 3 Sec. to Restore Factory Settings																																																																									
FwF1	My Computer																																																																									
FwF2	Browser																																																																									
FwF3	Calculator																																																																									
FwF4	Search	Focused Search																																																																								
FwF5	Previous Track	Previous Track																																																																								
FwF6	Pause / Play/Pause	Pause / Play/Pause																																																																								
FwF7	Next Track	Next Track																																																																								
FwF8	Mute	Mute																																																																								
FwF9	Volume-	Volume-																																																																								
FwF10	Volume+	Volume+																																																																								
FwF11	Turn Down Screen Brightness	Turn Down Screen Brightness																																																																								
FwF12	Increase Screen Brightness	Increase Screen Brightness																																																																								
Function Key	Function Description																																																																									
FN + INS	Switch between 15 lighting modes																																																																									
FN + DEL	Change mode colors																																																																									
FN + < / FN + ↓	Adjust backlight brightness (5 levels)																																																																									
FN + < / FN + >	Adjust backlight speed (5 levels)																																																																									
FN + WINDOWS	Lock/Unlock Windows and app functions (keys light up white)																																																																									
FN + PRSTC	Switch side light modes																																																																									
FN + H0ISE	Adjust side light color																																																																									
FN + < / B	Adjust side light brightness (5 levels)																																																																									
FN + P-UP / PGDN	Adjust side light speed (5 levels)																																																																									
FN + BACK	Turn off the backlight of the keyboard (the side lights remain illuminated)																																																																									
Power Norge: http://www.power.no/kundservice/ T: 21 00 40 00	Power 1 Danmark: http://www.power1.dk/kundservice/ T: 70 70 17 07																																																																									
Expert Danmark: http://www.expert.dk/kundservice/ T: 70 70 17 07	Power Finland: http://www.power.fi/kali/osaajapalvelu/ 1.0305.0305																																																																									
Power Danmark: http://www.power.dk/kundservice/ T: 70 33 80 80	Power Sverige: http://www.power.se/kundservice/ 1.08 517 66 000																																																																									
CEPTER TRÅDLØST MEKANISK SPILLTASTATUR BRUKERHÅNDBOK  NO CYCLOPSRO www.cepterch.com NO-1	Introduksjon Velkommen til en verden av høyteknologisk spill med CEPTER-spilltastatur. Tastaturet er laget for å leve til tross for dine, med røde mekaniske brytere for en responsiv og taktil skriveopplevelse. Sjopp les spilloversettet ditt med CEPTER spilltastatur. La eventyret begynne! Pakkens innhold 1 x spilltastatur, 1 x USB-A-C-kabel, 1 x brukerhåndbok Tekniske spesifikasjoner Type nøkkelbryter: Røde mekaniske brytere Baggrunnsbelysning: Tilpassbar RGB-baggrunnsbelysning Makro-taster: Fullt programmerbare taster Anti-ghosting: Fullt anti-ghosting for tast: Grensensett: Kabelt / 2,4GHz / Bluetooth Kabeltype: Flettet fiberkabel med magnetring Kabel lengde: 1,8m Inndata: 5 V = 1 A Dimensjoner: 362 x 136 x 41 mm Kompatibilitet: Windows XP, 7, 8, 10, 11, / macOS NO-2	Kom i gang																																																																								

[illegible]