CEPTER

HORIZON

Wireless Controller for PC

Quick Start Guide

CHORIZONPC

www.ceptertech.com

Instruction Manual - English ———— page 01-15
Bruksanvisning - Norsk ———— side 16-30
Brugervejledning - Dansk ———— side 31-45
Käyttöopas - suomi ———— sivu 46-60
Bruksanvisning - Svenska ———— sida 61-75

EN
NO
DA
FI
SE

EN

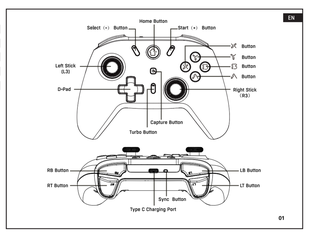

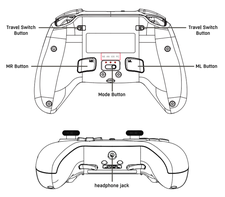

Controller Specification

Input Voltage: 5V, 350mA
Working Voltage: 3.7V
Battery Capacity: 1000mAh
Size: 158*108.8*38.8mm
Weight: 290±10g
Bluetooth Version: 5.0

Charging Station Specifications

Interface: Type-C
Power Input: DC 5V/1-2A
Power Output: DC 5V/1A
Charging Duration: 2h
Weight: 98g
Size: 127*85*56mm

System Requirements

Windows PC, Steam Deck, Android (Android 10.0 & above), and iOS (iOS 13.4 & above) devices.

Package Contents

Wireless controller × 1PC
USB-A to USB-C cable × 1PC
Charging Station × 1PC
Quick Start Guide× 1PC

Switch Console Wireless Connection

Please Note: Ensure that the airplane mode on the console is turned off before use.
Step 1: Begin by setting the connection mode switch to the "NS" position located on the back of the controller.
Step 2: Power on the controller and navigate to the controller's menu to select "Change Grip/Order."
Step 3: Press and hold the sync button on the top of the controller for one second to enter Console Bluetooth Pairing mode; LEDs 1 to 4 will flash rapidly in sequence.
Step 4: Once the connection is established successfully, LED 1 will remain illuminated.

Wake Up and Reconnect

Once the controller has successfully paired with the console:
• If the console is in SLEEP mode, pressing the HOME button on the controller can wake up both the controller and the console.
• If the console is already on, pressing any button on the controller will wake it up and allow it to reconnect to the console.

If you are unable to establish a connection, please follow these three steps:
• Disable Airplane mode on the console.
• Delete the controller's information on the console (Navigate to System Settings > Controllers and Sensors > Disconnect Controllers).
• Repeat the First-Time Pairing steps.

Controller Auto Sleep

• While on a wireless connection, press and hold the home button for 3 seconds to disconnect the controller and activate sleep mode.
Please note:
• If no buttons are pressed within 5 minutes, the controller will automatically enter sleep mode.
• The controller will also enter sleep mode when the console is in sleep mode.

Switch Console Wired Connection

Step 1: Enable "Pro Controller Wired Communication" on the console by navigating to System Settings > Controllers and Sensors > Pro Controller Wired Communication > On.
Please Note: Ensure that "Pro Controller Wired Communication" is enabled BEFORE connecting the controller and the Dock with the cable.

Step 2: Begin by adjusting the mode switch to the "NS" position located on the back of the controller.
Step 3: Connect the controller to the console using a Type-C cable.

Step 4: Upon a successful connection, LEDS will begin to flash.

Audio Function

The controller features a 3.5mm audio port that supports 3.5mm wired headsets or microphones.
Please note:
• The audio function is functional ONLY in Wired Connection Mode with the console.
• It will NOT operate during wireless connections or when the controller is wired to a PC.

Ensure that 'Pro Controller Wired Communication' is turned on BEFORE connecting the controller and the Dock with the cable.

Step 1: Navigate to System Settings > Controllers and Sensors > Pro Controller Wired Communication and turn it On.
Step 2: Place the console in the dock and set it to TV mode.
Step 3: Connect the Dock and the controller using the USB cable.
Step 4: Look for the USB icon on the screen to confirm a successful wired connection.
Step 5: Insert the 3.5mm audio jack into the audio port located at the bottom of the controller.

Turbo and Auto-fire Setup

Buttons Available for Turbo Function: A/B/X/Y/LB/RB/LT/RT buttons

Setting Up the Turbo Function:
• Manual Turbo Function: Press and hold the Turbo button, then press any function button ONCE to activate the "Manual Turbo Function."
• Auto Turbo Function: Repeat the first step above to switch to the "Auto Turbo Function."
• Turning Off the Turbo Function: Repeat the first step after the "Auto Turbo Function" has been set.

Disabling All Turbo Functions for All Buttons:
Press and hold the Turbo button for 8 seconds until the controller vibrates, which will deactivate the turbo functions for all buttons.

Turbo Speed Levels:
• Slow: 5 shots/s, indicated by LED indicators flashing at a slow speed.
• Medium: 15 shots/s (Default Level), indicated by LED indicators flashing at a medium speed.
• Fast: 25 shots/s, indicated by LED indicators flashing at a fast speed.

Adjust the Turbo Speed Levels:
Press and hold the Turbo button, push down the right joystick to decrease one grade of turbo speed; pull up the right joystick to increase one grade of turbo speed.

You can test and check the Turbo settings on a console by following these steps:
Go to Settings > Controllers and Sensors > Test Input Devices > Test Controller Buttons.

Adjusting Vibration Intensity

There are four levels of Vibration Intensity: None, Weak, Medium, Strong.

To Adjust the Vibration Intensity:
• Press and hold the Turbo button.
• Move the left joystick UP to increase one grade of vibration intensity.
• Move the left joystick DOWN to decrease one grade of vibration intensity.

Macro Definition Function

• The controller features two macro-enabled programmable buttons "ML/MR" on the back, which can be programmed into function buttons or button sequences.
• Macro Buttons can be programmed to: A/B/X/Y/LB/RB/LT/RT/up/down/left/right buttons.

Setting up the Macro Definition:
Step 1: Press and hold the "Capture" + "ML"/"MR" together for 2 seconds. A short vibration will remind you, and LEDZ-LED3 will stay lit, indicating the controller is ready to record the macro setting.
Step 2: Press the function buttons that need to be set sequentially. The controller will record the button with the time interval between each button pressed.
Step 3: Press the macro button ML or MR shortly to save. A short vibration will remind you, and the corresponding player LED light will stay lit, indicating that the macro definition setting has been saved. The last macro definition setting will automatically apply when the controller reconnects to the console.

Clearing the Macro Definition Settings:
Step 1: Press the "Capture" + "ML"/"MR" together for 2 seconds to enter settings mode. A short vibration will remind you, and the LEDz-LED3 will stay lit.
Step 2: Exit setting mode by pressing the same ML/MR buttons, and the corresponding player LED will light up again, clearing the macro definition setting within the current slot.

RGB Lighting Control Instructions:

1. Startup Lighting Effect:
• There are four controllable RGB lights under each of the left and right joysticks with a psychedelic gradient at startup.
• Under ABXY, there is one controllable LED each that is on all the time (Light effect memory mode).
2. Lighting Display Modes:
• The colored lights are categorized into three major groups of light display modes:
a.Eight-color gradient mode.
b.Changing color breathing mode.
c.Fixed color mode.

3. Switching Light Effect Modes:
• Press the START key and the LEFT key to cycle through different modes: Seven-color gradient → Single-color breathing → Fixed color → All off.
4. Adjusting Light Intensity:
• Increase light brightness: Hold the "SELECT" and press the "Up" button on the D-Pad.
• Decrease light brightness: Hold the "START" and press the "Down" button on the D-Pad.
• There are six levels of light intensity: 20% brightness, 0-20%-40%-60%-80%-100%. The settings have memory and saving functionality.
5. Eight-color Gradient Mode:
• All lights are on with a seven-color gradient (left and right 30 lights).
• The left and right 30 lights change cyclically through colors: Red, Orange, Yellow, Green, Cyan, Blue, Purple, White.

6. Single-color Breathing Mode:
• Eight types of colors: Red, Orange, Yellow, Green, Cyan, Blue, Purple, White.
• Colors automatically change to the next in sequence every second. Press the START key and the RIGHT key to switch to the next color.
7. Fixed Color Mode:
• Eight types of colors: Red, Orange, Yellow, Green, Cyan, Blue, Purple, White.
• Colors automatically change to the next in sequence every second. Press the START key and the RIGHT key of the D-pad to switch to the next color.

Multi-Platform Wireless Connection Setup:

Android Wireless Connection Mode:

Step 1: Move the mode switch to the "Android" position.
Step 2: Press and hold the pairing button on the controller's top for one second to enter Android Bluetooth Pairing mode; LEDs 2 and 3 will flash rapidly.

Step 3: Enable Bluetooth on your Android device and select the detected controller: GAMEPAD.
Step 4: Upon successful connection, LEDs 2 and 3 will remain steady.

PC Steam Deck Wireless Connection Mode:

Step 1: Configure the mode switch to the "WIN PC" position.
Step 2: Press and hold the pairing button on the controller's top for one second to activate Bluetooth pairing mode; LEDs 1 to 4 will flash rapidly.
Step 3: Enable Bluetooth on your PC/Steam Deck and choose the identified controller: Pro Controller.
Step 4: After a successful connection, LED 1 will stay solid.

IOS Wireless Connection Mode:

Step 1: Set the mode switch to the "OS" position.
Step 2: Press and hold the pairing button on the controller's top for one second to activate Bluetooth pairing mode; LEDs 1 and 2 will flash rapidly.
Step 3: Enable Bluetooth on your iOS device and select the detected controller: Xbox Wireless Controller.
Step 4: Upon successful connection, LEDs 1 and 2 will remain steady.

Wired Connection:

Step 1: For a wired connection, switch the mode switch to the PC mode gear and connect the PC console using the included Type-C data cable. LEDZ1 + LED3 will be on.
Step 2: Switch between modes by pressing and holding the Start + Select keys for 3 seconds. In Dinput mode, LEDZ + LED4 will be on.
Step 3: Under PC mode, double-clicking the CAPTURE key can switch the function between the cross key and the left joystick.

Note: The audio function only works in the WIRED Pro Controller mode and will not work in the wireless Pro Controller mode.

PC 2.4G mode:

First, set the mode switch to 2.4G mode with Windows logo. Press the pairing button on the front of the game controller for one second to enter Bluetooth pairing mode. The LEDS + LED4 marker lights will flash quickly. After successful connection, LEDZ and LED3 will light up.
When the receiver is turned on, it is in Xinput mode. You can switch between Xinput, Pro and Dinput modes by holding the Start and Select buttons for three seconds. In Pro mode, LEDZ is on. In Dinput mode, LEDZ and LED4 are on.
In PC mode, double-pressing the CAPTURE button can switch the functions of the D-pad and the left joystick button.

Charging Instructions:

• The controller can be charged using the console charger, the Dock, a 5V 2A power adapter, or USB power supplies with a USB Type-C to Type-A cable.
• While charging with the console, the channel LED light(s) will flash, and the lights will turn off when fully charged.
• If charging without the console, the four LED lights will flash, turning off when fully charged.
• Low battery is indicated by flashing channel LED light(s), prompting a charge to prevent the controller from turning off.

Indicator Light Functionality of Charging Station:
• When the charging dock is powered on, the white indicator lights up briefly.
• During the gamepad charging process, the white light remains illuminated.
• Once the gamepad is fully charged, the white light switches off.

Calibrating the Control Sticks:

Step 1: Press the HOME button.
Step 2: Navigate to System Settings > Controllers and Sensors > Calibrate Control Sticks.
Step 3: Press the stick you want to calibrate.
Step 4: Follow the on-screen instructions to verify the controller functionality.

Calibrating Motion Controls:

1.Press the HOME button.

2.Navigate to System Settings > Controllers and Sensors > Calibrate Motion Controls > Calibrate the Controllers.
3.Place the controller on a horizontal plane.
4.Hold "SELECT+L/ZR" on the controller you want to calibrate.

Please Note:
• For first-time use of the wireless controller, it is recommended to calibrate both the Controller Sticks and Motion Controls before usage.
• If calibration fails, press the "Y" button to restore settings and the "X" button to repeat the calibration steps.
• After calibration, power off the controller, then restart both the controller and console for the settings to take effect.

Calibration and Interchange Function:

• If the joystick is not centered or drifting during use, you can manually correct it.
• First, turn the trigger limit switch to the analog gear.
• Press the Turbo + Start + Home keys to enter calibration mode. LEDS + LED3 and LED2 + LED4 will flash alternately.
• Shake the left and right joysticks two or three times. Slowly press the trigger. Repeat this process two or three times.
• Press the Select key to exit calibration mode, completing the calibration process.

Functionality Instructions:
3D Circular/Rectangular Switching:
• To switch between circular and rectangular modes, press L3 + Capture key.
• The RGB lights around 3D will change between red and blue.
• Motor vibration prompts will indicate the mode switch.
• The default mode is circular.

ABXY Position Interchange:
• Press Capture + A key to interchange the A and B buttons, and the X and Y buttons.
• The RGB lights around 3D will change between red and green.

• Motor vibration prompts will indicate the button swap.
• Memory adjustment is available for this function.
3D Dead Zone Conversion:
• Press START key + L3/R3 to toggle the dead zones.
• The indicator light will flash three times, accompanied by motor vibration prompts.
• You can turn off or on the left and right 3D dead zones with a 3% dead zone option.

Restore Factory Defaults:
• Press and hold Select + L3 + R3 for 5 seconds to restore factory defaults.
• Turbo vibration, macro definition, lighting effects, and key swaps will reset to their default values.
• The motor will vibrate for an extended period to indicate the reset completion.

Battery Functions:

Charging:
• When the gamepad is off and charging, the decorative lights are turned off. LEDS-LED4 flash slowly.
• When fully charged, the LED lights turn off.

Battery Level Display:
• While the gamepad is on, briefly press the Turbo and + keys to display the battery level.
• After 3 seconds, it returns to the current channel light status.
• Light 1: 1%-25% battery level
• Lights 1 and 2: 26%-50% battery level
• Lights 1, 2, and 3: 51%-75% battery level
• Lights 1, 2, 3, and 4: 76%-100% battery level

Low Battery Status:
• If the lithium battery voltage drops below 3.55V ± 0.2V, the current channel light flashes quickly to indicate low voltage.
• The voltage threshold can be adjusted as needed.

Low Battery Shutdown:
• If the lithium battery voltage falls below 3.35V ± 0.2V, the gamepad will automatically enter sleep mode.
• The voltage threshold can be adjusted according to requirements.

Firmware Update Instructions:

Step 1: Download the "KeyLinker" app from your mobile app store.
Step 2: Press and hold the SYNC button on the controller until the indicators flash quickly.
Step 3: Enable Bluetooth on your mobile device and pair it with the controller named "KeyLinker BLE-XXXX".
Step 4: Open the "KeyLinker" app and refresh it. Connect with the device "GAMEPAD" to access the app's features.

Now you can now customize functions and upgrade the firmware of your controller through the app.

Step 5: Select "Update Device" from the app menu.
Step 6: If a new version is available, click "Update Now" and confirm by selecting "Yes" when the update prompt appears.
Step 7: The firmware will be successfully updated. Restart your device and the app.

Note:
• Firmware updates are primarily to address occasional bugs.
• Only update if your controller experiences issues during use.
• There are no functional differences between firmware versions.

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.

Power International AS,
PO Box 523, 1471 Lørenskog, Norway

Punkt 1 Danmark:
https://www.punkt1.dk/kundeservice/
T: 70 70 17 07

Power Norge:
https://www.power.no/kundeservice/
T: 21 00 40 00

Power Finland:
https://www.power.fi/tuki/asiakaspalvelu/
T: 0305 0305

Expert Danmark:
https://www.expert.dk/kundeservice/
T: 70 70 17 07

Power Sverige:
https://www.power.se/kundservice/
T: 08 517 66 000

Power Danmark:
https://www.power.dk/kundeservice/
T: 70 33 80 80

NO

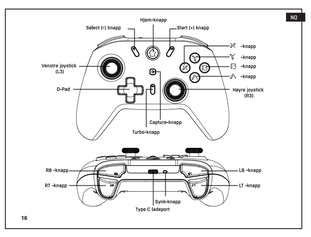

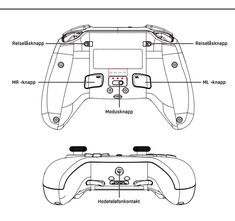

Kontrollertype

• Innspenningsspenning: 5V, 350mA
• Arbeidsspenning: 3.7V
• Batterikapasitet: 1000mAh
• Størrelse: 158 x 108.8 x 38.8mm
• Vekt: 290 ± 10g
• Bluetooth-versjon: 5.0

Ladestasjonsfunksjoner

Grensesnitt: Type-C
Strømtilførsel: DC 5V/1 - 2A
Strømutslipp: DC 5V/1A
Ladetid: 2 timer
Vekt: 98g
Størrelse: 127 x 85 x 56mm

Systemkrav

Windows PC, Steam Deck, Android (Android 10.0 eller nyere), og IOS (IOS 13.4S eller nyere enheter)

Innhold i pakken

• Trådløs kontroller × 1 stk
• USB-A til USB-C-kabel × 1 stk
• Ladestasjon × 1 stk
• Hurtigstartveiledning × 1 stk
• 2.4Ghz-trådløs dongle × 1 stk

Trådløs tilkobling til Switch-konsoll

Merk: Sørg for at flymodus på konsollen er slått av før bruk.
1.Start med å sette tilkoblingsmuligheten til "NS"-posisjonen på baksiden av kontrolleren.
2.Slå på kontrolleren og gå til kontrollermenyen for å velge "Endre grip/ordre".
3.Trykk og hold synkroniseringsknappen på toppen av kontrolleren i én sekund for å gå inn i konsollens Bluetooth-parameiseringsmodus; LED 1 til 4 vil blinke raskt i følge.
4.Når forbindelsen er etablert, vil LED1 forbli på.

Vekke og koble igjen

Når kontrolleren er blitt parret med konsollen:
• Hvis konsollen er i sovemodus, kan du trykke på HOME-knappen på kontrolleren for å vekke både kontrolleren og konsollen.
• Hvis konsollen allerede er på, vil trykk på ethvert knapp på kontrolleren vekke den og la den koble igjen til konsollen. Hvis du ikke kan etablere en forbindelse, følg disse tre trinnene:
• Slå av flymodus på konsollen.
• Slett kontrollerinformasjonen på konsollen (gå til Systeminnstillinger > Kontroller og sensorer > Koble fra kontrollere).
• Gjenta stegene for første gangparing.

Controller Auto Sleep (Controllerens automatiske sovemodus)
• Når du er på en trådløs forbindelse, hold inn home-knappen i 3 sekunder for å koble fra controlleren og aktivere sovemodus.
• Hvis ingen knapper trykkes på innenfor 5 minutter, vil controlleren automatisk gå inn i sovemodus.
• Controlleren vil også gå inn i sovemodus når konsollen er i sovemodus.

Switch - konsolltrådløsbinding

Trinn 1: Aktiver «Pro Controller Wired Communication» (Pro - controller-tilkommunikasjon) på konsollen ved å navigere til Systeminnstillinger > Controller og sensorer > Pro Controller Wired Communication (Pro - controller-tilkommunikasjon) > PÅ.
Vær opmerksom: Sørg for at «Pro Controller Wired Communication» (Pro - controller-tilkommunikasjon) er aktivert FØR du kobler controlleren og dockingstasjonen sammen med kabelen.

Trinn 2: Begrunn med å justere modusvekslet til «NS» - posisjonen som ligger på baksiden av controlleren.
Trinn 3: Koble controlleren til konsollen med en Type - C - kabel

Trinn 4: Ved en vellykket forbindelse vil LED1 begynne å blinke.

Lydfunksjon

Controlleren har en 3,5 mm lydport som støtter 3,5 mm trådløse hodetelefoner eller mikrofoner. Vær opmerksom:
1.Lydfunksjonen fungerer BARE i trådbundetgjennomsnitt med konsollen.
2.Den vil IKKE fungere under trådløse forbindelser eller når controlleren er koblet til en PC med en kabel.

Sørg for at «Pro Controller Wired Communication» (Pro - controller-tilkommunikasjon) er slått på FØR du kobler kontrolleren og dockingstasjonen sammen med kabelen.

Trinn 1: Naviger til Systeminnstillinger > Kontroller og sensorer > Pro Controller Wired Communication og slå den på.
Trinn 2: Plasser konsollen i dockingstasjonen og sett den til TV - modus.
Trinn 3: Koble dockingstasjonen og kontrolleren sammen med USB - kabelen.
Trinn 4: Søk etter USB - ikonet på skjermen for å bekrefte en vellykket trådløs tilkobling.
Trinn 5: Slikk 3,5 mm lydkoblingen i lydporten som ligger på bunnen av controlleren.

Turbo - og automatisk avfyringsoppsett

Knapper tilgjengelige for Turbo - funksjonen: A/B/X/Y/LB/RB/LT/RT - knappene

Oppsett av Turbo - funksjonen:
1.Manuell Turbo - funksjon: Hold inn Turbo - knappen, deretter trykk en gang på en hvilken som helst funksjonsknapp for å aktivere "Manuell Turbo - funksjon".
2.Automatisk Turbo - funksjon: Gjenta det første trinnet ovenfor for å skifte til "Automatisk Turbo - funksjon".
3.Å slå av Turbo - funksjonen: Gjenta det første trinnet etter at "Automatisk Turbo - funksjon" er satt.

Inaktivering av alle Turbo - funksjoner for alle knapper:
Hold inn Turbo - knappen i 8 sekunder til controlleren vibrerer, hvilket inaktiverer turbo - funksjonene for alle knapper.

Turbo - hastighetsnivåer:
1.Langsom: 5 skudd/s, angitt ved at LED - indikatorene blinker langsomt.
2.Medium: 15 skudd/s (Standardnivå), angitt ved at LED - indikatorene blinker med middels hastighet.
3.Fart: 25 skudd/s, angitt ved at LED - indikatorene blinker med høy hastighet.

Justere Turbo - hastighetsnivåene:
Hold Turbo - knappen nede, trykk høyre joystick ned for å redusere turbo - hastigheten med én vinkel; trekk høyre joystick up for å øke turbo - hastigheten med én vinkel.
Du kan teste og kontrollere Turbo - innstillingene på en konsoll ved å følge disse trinnene: Gå til Innstillinger > Kontroller og sensorer > Test inndataenheter > Teste kontrollerknapper.

Justering av vibrasjonsstyrke
Det er fire nivåer av vibrasjonsstyrke: Ingen, Svak, Medium, Sterk.

For å justere vibrasjonsstyrken:

• Hold inn Turbo - knappen.
• Flytt venstre joystick OPP for å øke vibrasjonsstyrken med én grad.
• Flytt venstre joystick NED for å redusere vibrasjonsstyrken med én grad.

Makrodefinisjonsfunksjon

• Controlleren har to makroaktiverte programmerbare knapper "ML/MR" på baksiden, som kan programmeres til funksjonsknapper eller knappesekvenser.
• Makroknapper kan programmeres til: A/B/X/Y/LB/RB/LT/RT/opp/ned/venstre/høyre - knappene.

Oppsett av makrodefinisjonen:
Trinn 1: Trykk og hold "Capture" + "ML"/"MR" samtidig i 2 sekunder. En kort vibrasjon vil varsle deg, og LEDZ - LED3 vil forbli tente, noe som indikerer at controlleren er klar til å registrere makroinstillingen.
Trinn 2: Trykk på de funksjonsknappene som trenger å settes sekvensielt. Controlleren vil registrere knappene sammen med tidsintervallet mellom hver knappetrykk.
Trinn 3: Trykk kort på makroknappen ML eller MR for å gemme. En kort vibrasjon vil varsle deg, og den tilsvarende spillerens LED - lys vil forbli tent, noe som indikerer at makrodefinisjonsinnstillingen er lagret. Den siste makrodefinisjonsinnstillingen vil automatisk bli brukt når controlleren kobles igjen til konsollen.

Slette makrodefinisjonsinnstillingene:
Trinn 1: Trykk "Capture" + "ML"/"MR" samtidig i 2 sekunder for å komme inn i innstillingsmodus. En kort vibrasjon vil varsle deg, og LEDZ - LED3 vil blive ved med at lyse.
Trinn 2: Avslutt innstillingsmodus ved å trykke på de samme ML/MR - knappene, og den tilsvarende spillere LED - lys vil blive ved med at lyse, hvilket sletter makrodefinisjonsinnstillingen i den aktuelle plassen.

RGB - lyskontrollinstruksjoner:

1.Startupbyvisningseffekt:
• Det er fire kontrollerbare RGB - lys under venstre og høyre joystick med en psykedelisk gradient ved startup.
• Under ABXY er det et kontrollerbart LED - lys som er på hele tiden (Lyseffektminneskjed).
2.Lysvisningsmoduser:
• Fargelysene er kategorisert i tre hovedgrupper av lysvisningsmoduser:
a. Åtte - farge gradientmodus.
b. Endrende farge åndedrettsmodus.
c. Fast fargemodus.
3.Skifte mellom lys effektmoduser:
• Trykk START - knappen og VENSTRE - knappen for å gå gjennom forskjellige modi: Syv - farve gradient → Enkelt farve åndedrettsmodus → Fast farve → Alle av.
4.Justere lysstyrke:
• Øke lysstyrkene: Hold inn "SELECT" og trykk på "UPP" - knappen på D - pad.
• Redusere lysstyrkene: Hold inn "START" og trykk på "NED" - knappen på D - pad.
• Det er seks nivåer av lysstyrke: 20% lysstyrke, 0 - 20% - 40% - 60% - 80% - 100%. Innstillingene har hukommelses - og gemmefunksjon.
4.Ofte - farve gradientmodus:
• Alle lysene er på med en syv - farve gradient (venstre og høyre 30 - lys).
• Venstre og høyre 30 - lys endrer seg syklisk gjennom fargene: Rød, Oranje, Gul, Grønn, Cyan, Blå, Lilla, Hvit.

6.Enkelt farve åndedrettsmodus:
• Åtte typer farger: Rød, Oranje, Gul, Grønn, Cyan, Blå, Lilla, Hvit.
• Fargene endrer seg automatisk til den neste i følge hvert sekund. Trykk START - knappen og HØYRE - knappen for å skifte til den neste farven.
7.Fast fargemodus:
• Åtte typer farger: Rød, Oranje, Gul, Grønn, Cyan, Blå, Lilla, Hvit.
• Fargene endrer seg automatisk til den neste i følge hvert sekund. Trykk START - knappen og HØYRE - knappen på D - pad for å skifte til den neste farve.

Oppsett av trådløs forbindelse over flere plattformer:

Android - trådløs forbindelsesmodus:

Trinn 1: Flytt modusbytet til «Android» - posisjonen.
Trinn 2: Hold parringsknappen på toppen av kontrolleren i én sekund for å komme inn i Android Bluetooth - parringsmodus; LED 2 og 3 vil blinke raskt.
Trinn 3: Aktiver Bluetooth på din Android - enhet og velg den opdagede kontrolleren: GAMEPAD.
Trinn 4: Ved en vellykket forbindelse vil LED 2 og 3 blive ved med at være stabile.

PC Steam Deck - trådløs forbindelsesmodus:

Trinn 1: Konfigurer modusbytet til "WIN PC" - posisjonen.
Trinn 2: Hold parringsknappen på toppen av kontrolleren i én sekund for å aktivere Bluetooth - parringsmodus; LED 1 til 4 vil blinke hurtig.
Trinn 3: Aktiver Bluetooth på din PC/Steam Deck og velg den identifiserende kontroller: Pro Controller.
Trinn 4: Etter en vellykket forbindelse vil LED1 blive ved med at være lysstandt.

IOS - trådløs forbindelsesmodus:

Trinn 1: Sett modusbytet til "IOS" - posisjonen.
Trinn 2: Hold inn parringsknappen på toppen av kontrolleren i én sekund for å aktivere Bluetooth - parringsmodus; LED 1 og 2 vil blinke raskt.
Trinn 3: Aktiver Bluetooth på din IOS - enhet og velg den opdagede controlleren: Xbox Wireless Controller.
Trinn 4: Ved en vellykket forbindelse vil LED 1 og 2 forbli stabile.

Trådløs tilkobling

Trinn 1: For en trådløsbinding, skift modusvekslet til PC - modus - posisjonen og forbind til PC - konsollen med den medfølgende Type - C - datakabel. LEDZ + LED3 vil være tændt.
Trinn 2: Skift mellom moduser ved at holde Start + Select - knappene i 3 sekunder. I Dinput - modus vil LEDZ + LED4 være tændt.
Trinn 3: Under PC - modus du dobbelt - trykke på CAPTURE - knappen for at skifte funktion mellom kryss - knappen og venstre joystick.
Bemærk: Lydfunktionen fungerer kun i trådløs Pro - kontroller - modus og vil ikke fungere i trådløs Pro - kontroller - modus.

PC 2.4G - modus:

Først skifter du modusbytet til 2.4G - modus - positionen med Windows - logotypen. Trykk på parringsknappen på forside af spillkontrolleren i én sekund for at komme ind i Bluetooth - parringsmodus. LEDZ - LED4 + markørlysene vil blinke hurtigt. Etter en vellykket forbindelse vil LEDZ og LED3 blive tændt.
Når modtageren er tændt, er den i Xinput - modus. Du kan byte mellan Xinput, Pro - og Dinput - tilstande ved at holde Start - og Select - knappene i 3 sekunder. I Pro - modus er LEDZ tændt. I Dinput - modus er LEDZ og LED4 tændt.
I PC - modus kan du dobbelt - trykke på CAPTURE - knappen for at byte funktionene på kryds - knappen og venstre joystick.

Ladeinstruksjoner:

• Kontrolleren kan lades med konsollens ladeadapter, dockingstasjonen, en 5V 2A - strømadapter eller USB - strømforsyninger med en USB Type - C til Type - A - kabel.
• Når den lades med konsollen, vil kanal - LED - lyset (lysene) blinke, og lysene slår av når den er full ladet.
• Hvis du lader uten konsollen, vil de fire LED - lysene blinke og slå av når den er full ladet.

• Det batteristyrt indikeres ved blinkende kanal - LED - lys (lysene), som påminner deg til å lade for å forhindre at controlleren slår av.

Indikatorfunksjonalitet for ladestativ:
• Når ladestasjon er slått på, lyser det hvite indikatorlyset kortvarig.
• Under spillkontrollerens ladingsprosess forblir det hvite lyset tændt.
• Når spillkontrolleren er full ladet, slår det hvite lyset av.

Kalybrering av kontrollstickene:

Trinn 1: Trykk på HOME - knappen.
Trinn 2: Naviger til Systeminnstillinger > Controller og sensorer > Kalibrer kontrollstickene.
Trinn 3: Trykk på sticken du vil kalibrere.
Trinn 4 følg skjerminstruksjonene for at verifisere kontrollerens funksjonalitet.

Kalybrering av bevegelseskontroll:

1.Trykk på HOME - knappen.
2.Gå til Systeminnstillinger > Kontroller og sensorer > Kalibrer bevegelseskontroller > Kalibrer kontrollerne.
3.Plasser kontrolleren på et horisontalt plan.
4.Hold inn "SELECT+L/ZR" på kontrolleren du vil kalibrere.

Vær opmerksom:
• For første gang du bruker den trådløse controlleren, anbefales det å kalibrere både kontrollstickene og bevegelseskontrollen først.
• Hvis kalibreringen mislykkes, trykk på "Y" - knappen for å gjenopprette innstillingene og "X" - knappen for å gjenta kalibrerings - trinnene.
• Etter kalibrering, slå av controlleren, deretter start controlleren og konsollen på nytt for at innstillingene skal ta effekt.

Kalibrering av bytefunksjon:

• Hvis joysticken ikke er sentrert eller driver under bruk, kan du manuelt korrigere det.
• Først, vend trigger - begrensningsskiftet til analog - posisjonen.
• Trykk på Turbo + Start + Home - knappene for å komme inn i kalibreringsmodus. LEDS + LED3 og LED2 + LED4 vil blinke vekselvis.
• Ryst venstre og høyre joysticks to eller tre ganger. Trykk langsomt på trigeren. Gentag denne processen to eller tre ganger.
• Trykk på Select - knappen for å avslutte kalibreringsmodus og fullføre kalibreringsprosessen.

Funksjonsinstruksjoner: 3D - sirkel / rektangel - skift:
• For å skifte mellom sirkel - og rektangelmodus, trykk på L3 + Capture - knappen.
• RGB - lysene rundt 3D - området vil skifte mellom rød og blå.
• Motorvibrasjoner vil varsle om modusbytet.
• Standardmodus er sirkel.

ABXY - posisjonsbytte:
• Trykk på Capture + A - knappen for å bytte plass på A - og B - knappene, samt X - og Y - knappene.
• RGB - lysene rundt 3D - området vil skifte mellom rød og grøn.
• Motorvibrasjoner vil indikere knappbytet.
• Denne funksjon har mulighet for hukommelsesjustering.

3D - dødsonekonvertering:
• Trykk på START - knappen + L3/R3 for å skifte mellom dødsoner.
• Indikatorlyset vil blinke tre ganger, sammen med motorvibrasjonsindikatorer.
• Du kan slå av eller på venstre og høyre 3D - dødsoner, med en 3% - dødsonemulighet.

Gjenopprett fabrikkinnstillinger:
• Hold inn Select + L3 + R3 i 5 sekunder for å gjenopprette fabrikkinnstillinger.
• Turbo - vibrasjon, makrodefinisjon, lyseffekter og knappbytter vil bli tilbakestilt til deres standardverdier.
• Motoren vil vibrere i en lengre periode for å indikere at nullstillingen er fullført.

Trinn 2: Begrunn med å justere modusvekslet til «NS» - posisjonen som ligger på baksiden av controlleren.
Trinn 3: Koble controlleren til konsollen med en Type - C - kabel.

Trinn 4: Ved en vellykket forbindelse vil LED1 begynne å blinke.

Lydfunksjon

Controlleren har en 3,5 mm lydport som støtter 3,5 mm trådløse hodetelefoner eller mikrofoner. Vær opmerksom:
1.Lydfunksjonen fungerer BARE i trådbundetgjennomsnitt med konsollen.
2.Den vil IKKE fungere under trådløse forbindelser eller når controlleren er koblet til en PC med en kabel.

Sørg for at «Pro Controller Wired Communication» (Pro - controller-tilkommunikasjon) er slått på FØR du kobler kontrolleren og dockingstasjonen sammen med kabelen.

Trinn 1: Naviger til Systeminnstillinger > Kontroller og sensorer > Pro Controller Wired Communication og slå den på.
Trinn 2: Plasser konsollen i dockingstasjon